

# Controls


- [Gestures](#)
- [Presenter](#)

# Gestures

The glass board works with any object. The most popular one is the marker, but you can also use your finger. Although fingers do leave marks, sometimes it looks more organic. **Don't forget to wipe finger marks off the board!**

We control the presentation and its elements using gestures, when we touch the sensor panel. The three main combinations are touching with one, two and three (or more) fingers.


Let's start with the last one: touching with **three** or more fingers simultaneously brings up a toolbar that allows you to fully control the recording.

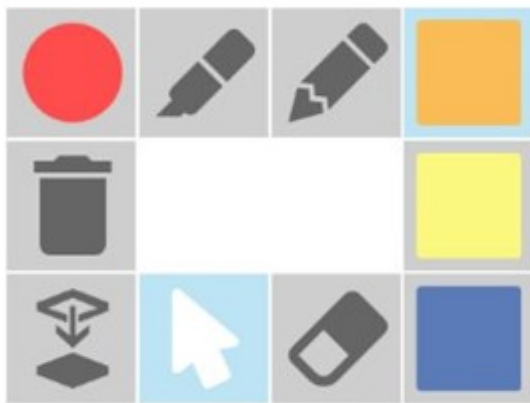

To select the tool you need on the panel, you have to tap with **one** finger.

The toolbar is automatically hidden when you have selected a tool. If you want to close it without selecting a tool, you need to tap with one finger anywhere outside the toolbar area.

By swiping with **two** fingers, you can scroll through slides, control video playback and start animations (if you swipe to the left, and to the right if you want to go back).

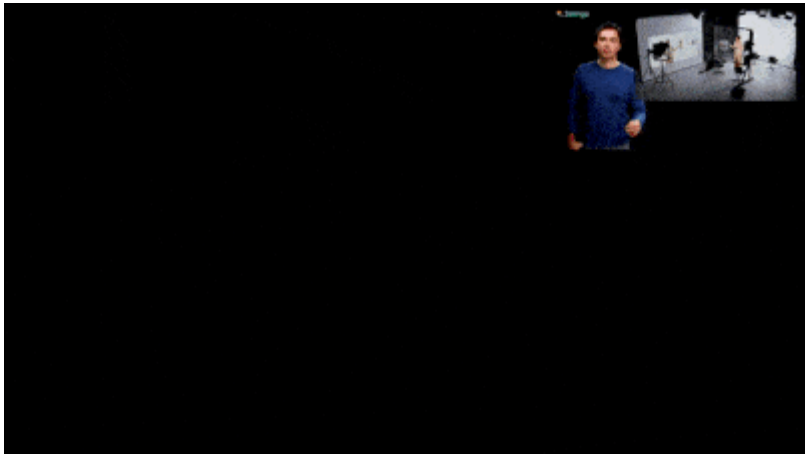

# Presenter

The presenter has the same functions as the switching gesture. It can also be used to scroll through slides and play videos and animations.

The left button starts a recording, and the right button can be configured depending on your preferences — start and stop the teleprompter or show and hide the speaker screen. These functions can be found in the “General settings” section.

Don’t forget that the switching gesture is universal — it scrolls through slides and starts videos and animations. If there is a video on your slide, for example, the gesture will first activate the video and only after that switch to the next slide.

