

Audio settings

Microphone – here you need to select the recording device that is installed in your studio. Choose either the lapel microphone of your model for recording video, or Jabra for online streaming.

Second audio input – leave this blank, if you enter something here, there will be an echo during the recording.

Mono – yes

Audio delay – 2

Presentation sound level – as required

Audio output device – this can be left on Default.

If you feel that the speaker is talking too loudly/quietly, you'll need to do a soundcheck and adjust the volume using the Gain setting on an audio device, or contact technical support.

Audio



Microphone

Second audio input

Mono

Yes

☐

Audio delay, frames

Presentation sound level

Audio output device

Revision #1

Created 4 April 2023 18:18:56 by Alina Petlichenko

Updated 4 April 2023 18:20:22 by Alina Petlichenko