

# Presenter

The presenter has the same functions as the switching gesture. It can also be used to scroll through slides and play videos and animations.

The left button starts a recording, and the right button can be configured depending on your preferences — start and stop the teleprompter or show and hide the speaker screen. These functions can be found in the “General settings” section.

Don't forget that the switching gesture is universal — it scrolls through slides and starts videos and animations. If there is a video on your slide, for example, the gesture will first activate the video and only after that switch to the next slide.



---

Revision #1

Created 31 March 2023 08:50:16 by Alina Petlichenko

Updated 4 April 2023 13:44:55 by Alina Petlichenko